

DVCP-3 AND LATER LINER KITS INSTALLATION INSTRUCTIONS

BLACK REFLECTIVE LINERS	
MODELS	DESCRIPTION
DVP32LKR	Traditional
DVP36LKR	Traditional
DVP42LKR	Traditional



CERAMIC FIBER LINERS	
MODELS	DESCRIPTION
DVP(32,36,42)FAB	Aged Brick
DVP(32,36,42)FCB	Cottage Brick
DVP(32,36,42)FRB	Rustic Brick

INSTRUCTIONS MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE AFTER INSTALLATION

Installation of Reflective Liners

Carton Contents:

- Rear Liner
- Left Liner
- Right Liner
- 2 - Brackets
- 2 - #10 x 1/2 Screws

Tools needed: Phillips screw driver

1. Prebend the brackets included with the kit as shown in **Figure 1**.




Figure 1

2. Place rear panel on log support in the back of the firebox and hold with one hand. **See Figure 2**.

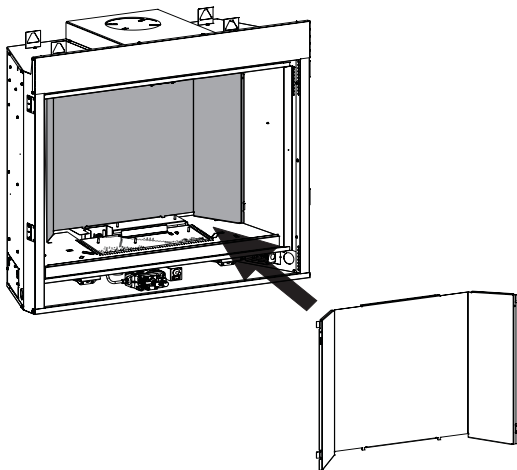


Figure 2

3. Place left panel against left firebox and rear panel and hold side in place.
4. Secure left panel in place with one of the brackets and a screw from Step 1. **See Figure 3**.

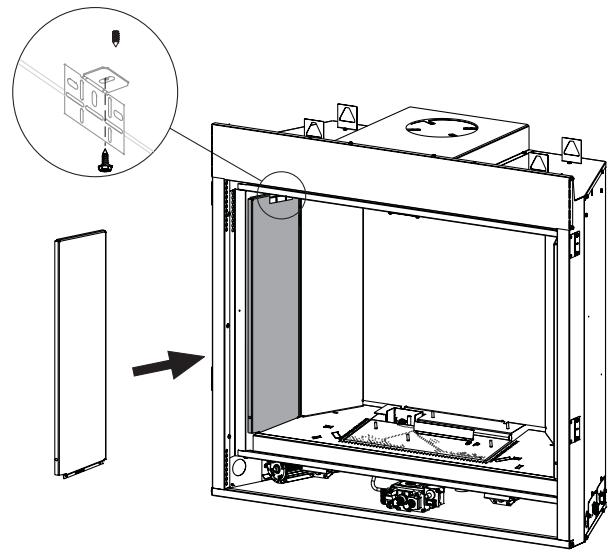


Figure 3

5. Repeat steps three and four for the right side.

Installation of Ceramic Fiber Liners

Carton Contents:

Rear Liner
Left Liner
Right Liner
2 - Brackets
2 - #10 x 1/2 Screws

Tools needed: Phillips screw driver

Installation of Ceramic Liners

1. Prebend the brackets included with the kit as shown in **Figure 4**.

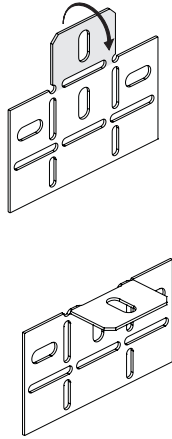


Figure 4

2. Place rear panel on log support in the back of the firebox and hold with one hand. **See Figure 5**.

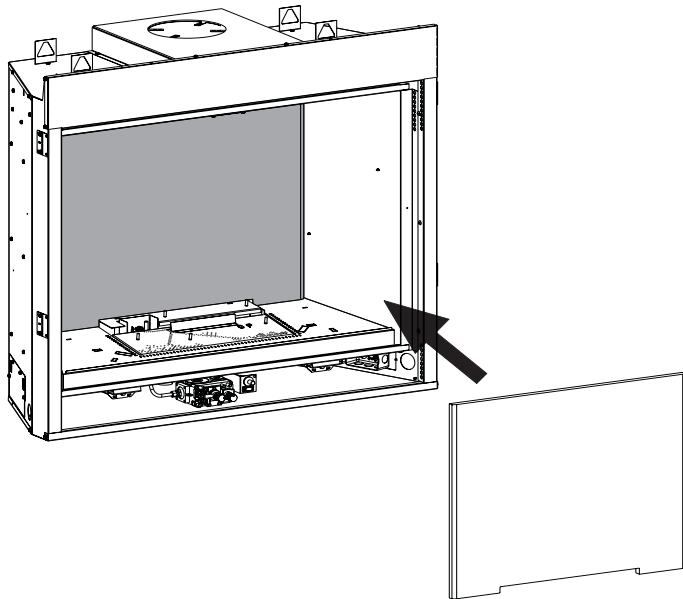


Figure 5

3. Place left panel against left firebox and rear panel and hold side in place.
4. Secure left panel in place with one of the brackets from step 1 and a screw. **See Figure 6**.


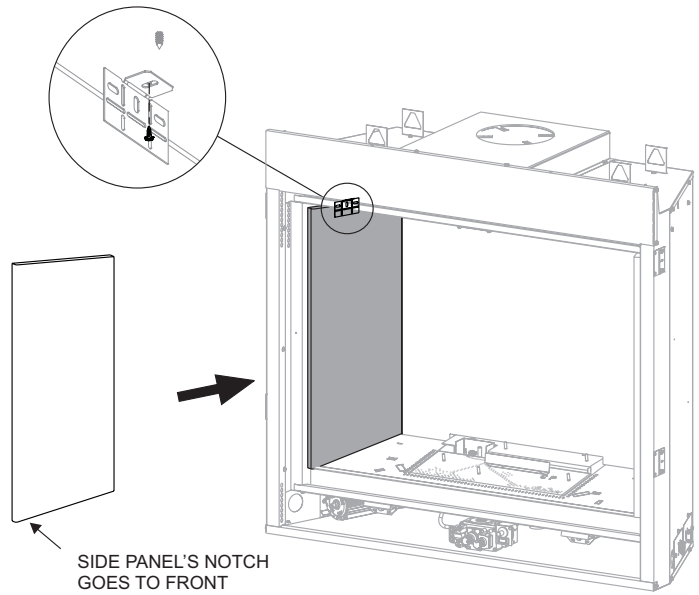


Figure 6


5. Repeat steps three and four for the right side.

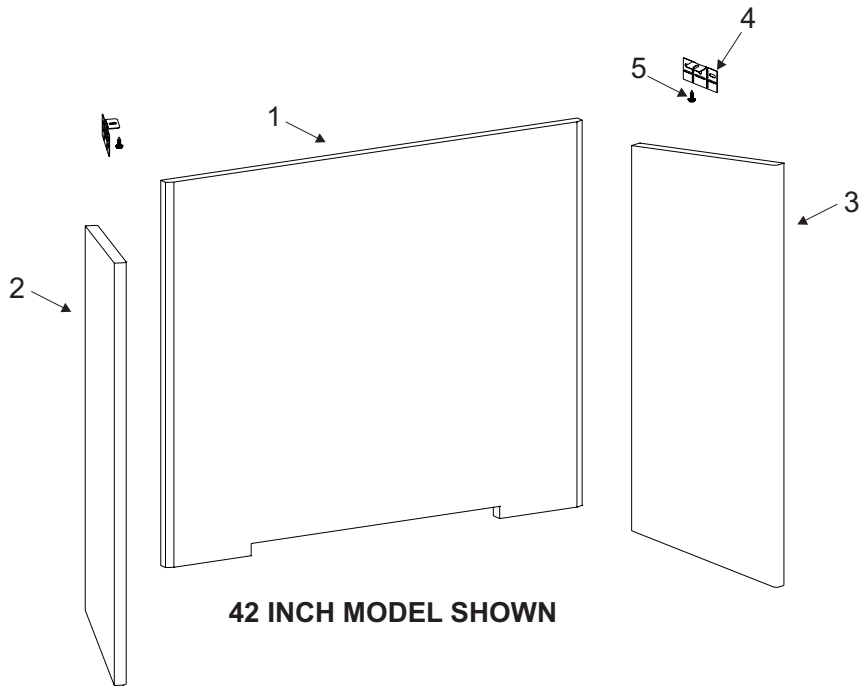

42 INCH MODEL SHOWN


BRICK LINER PARTS LIST

	32"	36"	42"		
INDEX NO.	PART NUMBERS - DVP(32,36,42)FAB			AGED BRICK LINER	QTY
1	37649	37665	37681	REAR	1
2	37650	37666	37682	LEFT	1
3	37651	37667	37683	RIGHT	1
4	29270	29270	29270	LINER BRACKET	2
5	R2737	R2737	R2737	SCREWS-#10 x 1/2	2
INDEX NO.	PART NUMBERS - DVP(32,36,42)FCB			COTTAGE BRICK LINER	QTY
1	37654	37670	37686	REAR	1
2	37655	37671	37687	LEFT	1
3	37656	37672	37688	RIGHT	1
4	29270	29270	29270	LINER BRACKET	2
5	R2737	R2737	R2737	SCREWS-#10 x 1/2	2
INDEX NO.	PART NUMBERS - DVP(32,36,42)FRB			RUSTIC BRICK LINER	QTY
1	37660	37676	37692	REAR	1
2	37661	37677	37693	LEFT	1
3	37662	37678	37694	RIGHT	1
4	29270	29270	29270	LINER BRACKET	2
5	R2737	R2737	R2737	SCREWS-#10 x 1/2	2

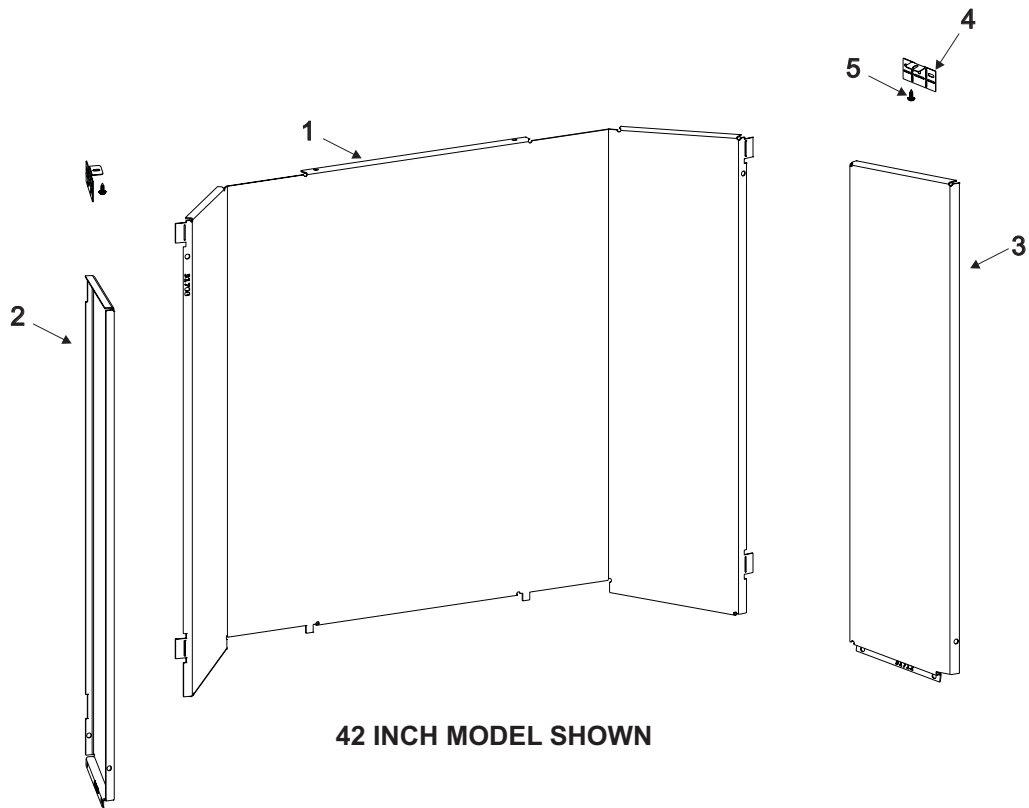

REFLECTIVE LINER PARTS LIST

INDEX NO.	DVP32LKR	DVP36LKR	DVP42LKR	PORCELAIN LINER
1	31605BL	31624BL	31708BL	REAR
2	31607BL	31607BL	31710BL	LEFT
3	31608BL	31608BL	31712BL	RIGHT
4	29270			LINER BRACKET
5	R2737			SCREWS - #10 x 1/2

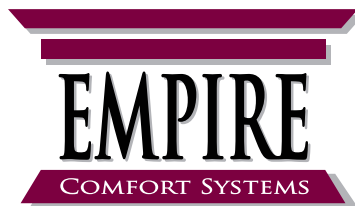

SINCE 1932

www.empirecomfort.com

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question about our products, please e-mail us at info@empirecomfort.com.

If you have a service or repair question, please contact your dealer.